

**5.4 CREW STEP PARTS LIST***P 11.05.24*

Qty -015	Qty -016	Qty -025	Qty -026	Qty -035	Qty -036	Part Number	Description
X						D206-628-015	CREW STEP, LH 206A/B
	X					D206-628-016	CREW STEP, RH 206A/B
		X				D206-628-025	CREW STEP, LH 206L/L-1/L-3/L-4
			X			D206-628-026	CREW STEP, RH 206L/L-1/L-3/L-4
				X		D206-628-035	CREW STEP, LH 407
					X	D206-628-036	CREW STEP, RH 407
				2	2	D2731-3RG	MOUNTING LUG
2	2	2	2			D2731-7RG	MOUNTING LUG
				2	2	D3394-1RG	MOUNTING LUG
2	2	2	2			D3394-3RG	MOUNTING LUG
		1		1		D4308-041	CREW STEP, LH
			1		1	D4308-042	CREW STEP, RH
2	2	2	2	2	2	D4309-1	BUSHING
1						D4357-041	CREW STEP, LH
	1					D4357-042	CREW STEP, RH
		4	4			AN4-11A	BOLT
4	4	4	4	4	4	AN4-12A	BOLT
2	2	2	2	2	2	AN4-15A	BOLT
6	6	6	6	6	6	MS21042-4	NUT
6	6	6	6	6	6	NAS1149D0463J	WASHER (AN960JD416)

**5.5 MAINTENANCE STEP PARTS LIST**

Qty -017	Qty -018	Qty -027	Qty -028	Qty -037	Qty -038	Part Number	Description
X						D206-628-017	MAINTENANCE STEP, LH 206A/B
	X					D206-628-018	MAINTENANCE STEP, RH 206A/B
		X				D206-628-027	MAINTENANCE STEP, LH 206L/L-1/L-3/L-4
			X			D206-628-028	MAINTENANCE STEP, RH 206L/L-1/L-3/L-4
				X		D206-628-037	MAINTENANCE STEP, LH 407
					X	D206-628-038	MAINTENANCE STEP, RH 407
2	2			2	2	D2731-3RG	MOUNTING LUG
		2	2			D2731-7RG	MOUNTING LUG
2	2			2	2	D3394-1RG	MOUNTING LUG
		2	2			D3394-3RG	MOUNTING LUG
2	2	2	2	2	2	D4309-1	BUSHING
		1		1		D4342-041	MAINTENANCE STEP, LH
			1		1	D4342-042	MAINTENANCE STEP, RH
1						D4358-041	MAINTENANCE STEP, LH
	1					D4358-042	MAINTENANCE STEP, RH
4	4	4	4	4	4	AN4-12A	BOLT
		4	4			AN4-13A	BOLT
2	2	2	2	2	2	AN4-15A	BOLT
6	6	6	6	6	6	MS21042-4	NUT
6	6	6	6	6	6	NAS1149D0463J	WASHER (AN960JD416)

• COPYRIGHT © 2005 BY DART AEROSPACE USA, INC. •  
 THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED  
 OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

**PRELIMINARY ISSUE**
 Revision: **G**  
 Date: 11.02.25

Rev PG1